

## Mailbox Solutions Installation Instructions


**Materials & Tools Needed :** 1-2 15kg bag of Mortar Mix, Level, Shovel  
Builder Line, small trowel & bucket for water.

1. Measure area for mailbox, allowing extra 100mm wider than base on box. This will allow more area for the mortar mix & keep the box stable.
2. Pour 1 bag of dry mortar mix per box into new area using a trowel & water to mix into a creamy paste
3. Manoeuvre mailbox onto mortar mix, stand back on boundary & check that mailbox is parallel with boundary or house.
4. Using level, check front face & side of mailbox. If not level mailbox can be rocked on wet mortar mix. if still not level, use mortar mix to pack end that needs it.

### **Double Mailbox E35 E100**

Level and trowel main mailbox first, then repeat for the second box. This helps to get them both level.

A fine spray with hose & paintbrush helps to remove excess mortar on the mailbox. A good trick is to leave the shrink wrap on until the end to keep paint clean.

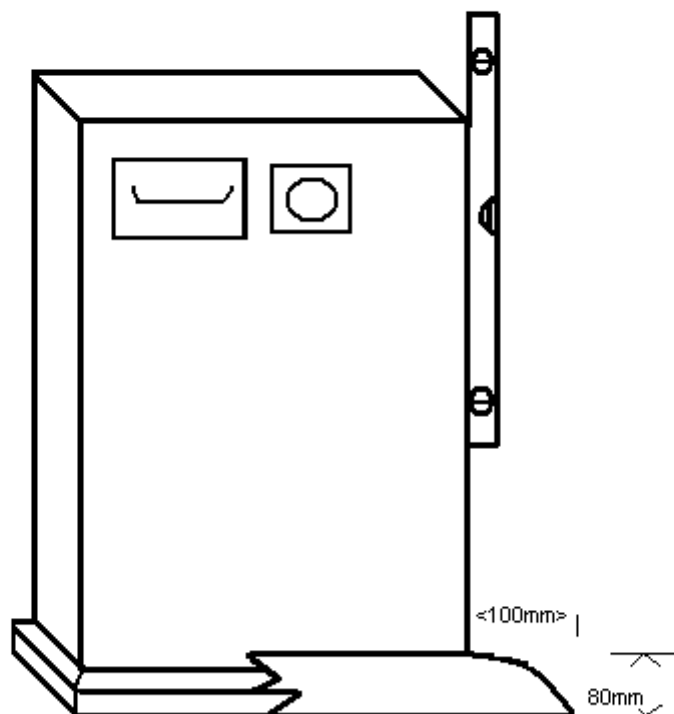

For any assistance Phone: Clive 040 77 32 430

Sales: Rhonda 07 3209 6092 email [mbsolutions@live.com.au](mailto:mbsolutions@live.com.au)